


QUICK MAINTENANCE GUIDE

DAILY

BEFORE USE


CONNECT THE BATTERIES:

Plug the connector (1) of the battery charger into the connector of the battery (2).

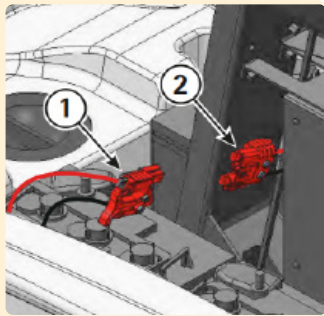

CHECK THE BATTERIES' CHARGE LEVEL:


The battery charge level is visualized on the display. When the last segment starts blinking, the battery is almost empty and the suction and brush functions are disabled. When the last segment turns off, the battery is fully empty.

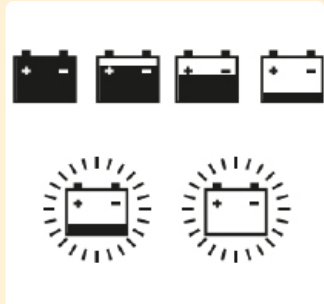

RECHARGE THE BATTERIES:


Plug the connector (1) of the battery charger into the connector of the battery (2).

Leave the recovery tank open during charging. Maintain the connection with the battery charger until the charge indicator stops lighting up.

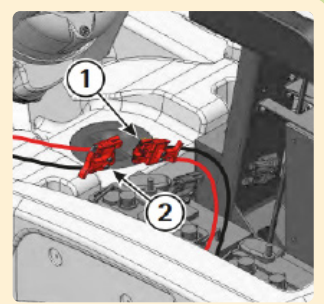

CHECK THE RECOVERY TANK:


Verify that the squeegee hose coupling (1) is correctly inserted into its seat and that the exhaust hose plug (2) is fully closed.

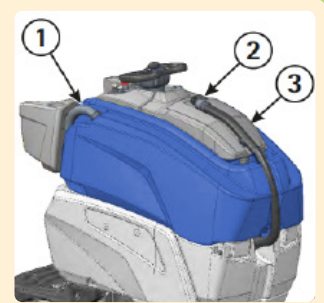

FILL THE SOLUTION TANK:

Open the solution tank cover and fill the solution tank with clean water. Add liquid detergent according to the manufacturer's recommended concentration.


If the machine is equipped with the 3S system, please read the user manual.

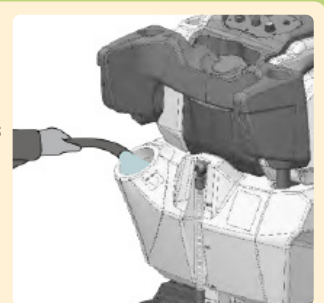

AFTER USE


EMPTY AND CLEAN THE RECOVERY TANK:

Open the lever plug on the exhaust hose and empty the dirty water into the appropriate containers.

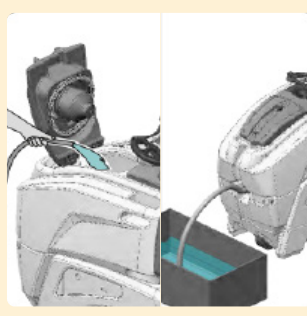


CLEAN THE SUCTION FILTER:

Remove the filter with the float and its protection by unscrewing the knob (1). Clean the filter with a water jet and reassemble it. Never use this machine without a filter.

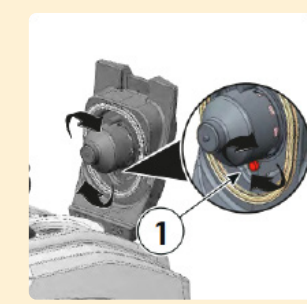


REMOVE THE BRUSHES (AUTOMATIC DISASSEMBLY):

Set the direction controller (1) to the neutral position. Turn the key (2) clockwise to start the machine. Keep pressing on the push button for some time (3). Turn off the machine (2).

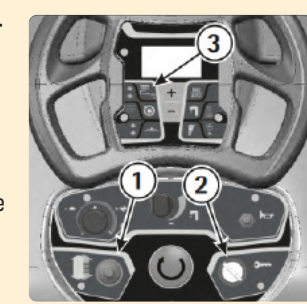


REMOVE THE BRUSHES (MANUAL DISASSEMBLY):

Turn the brushes in the opposite direction until they come loose. Clean the brushes with a water jet and reassemble them. Remove the splash guard rubber to facilitate the disassembly.

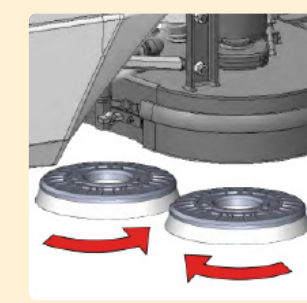

CLEAN THE SQUEEGEE:


Remove the squeegee hose. Loosen the knobs and remove the squeegee. Carefully clean the squeegee body and the rubbers.

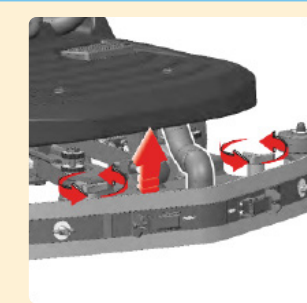

WEEKLY


CHECK THE REAR SQUEEGEE RUBBER:

Release the hooks (1). Unscrew the wing nuts (2) and remove the terminals (3) and the rubber holder blade (4). Remove the rubber (5) and turn or replace it.

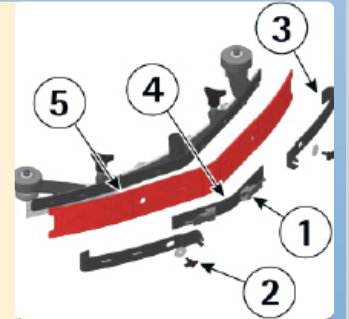


CLEAN THE SQUEEGEE HOSE:

Remove the hose from the squeegee coupling and wash the inside of the hose with a water jet.

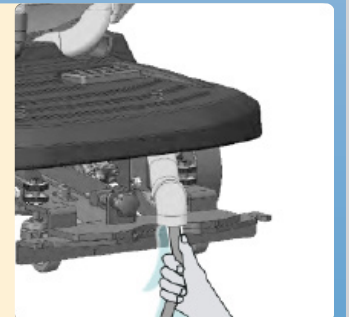

CLEAN THE SOLUTION TANK AND THE OUTER FILTER:

Bring the machine to a place where it is appropriate to drain the detergent solution. Unscrew the cap of the exhaust filter (1) and open the solution valve to empty the tank.

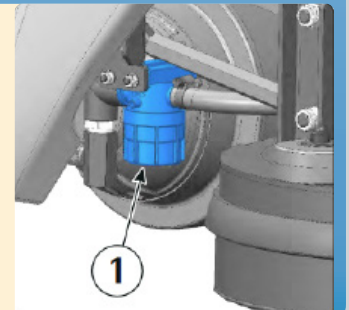


Rinse the tank and the filter with a water jet.

BIMONTHLY

CHECK THE FRONT SQUEEGEE RUBBER:


Remove the rear part of the squeegee. Unscrew the wing nuts and remove the blade (2). Replace the front rubber (3) if it is too worn out.

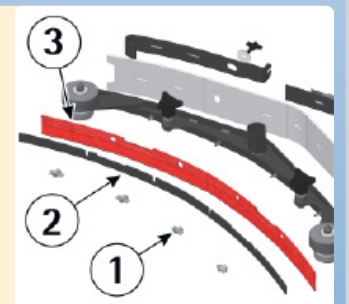

HALF-YEARLY

REPLACE THE SPLASH GUARDS:

Unscrew the knobs on the rear extremities of the splash guard blades that are situated on the cover assembly. Unscrew the lock nut on the front part of the splash guard blades and remove the splash guard blades. Replace the splash guards. Set the working position of the brushes in such a way that the splash guards skim the ground.

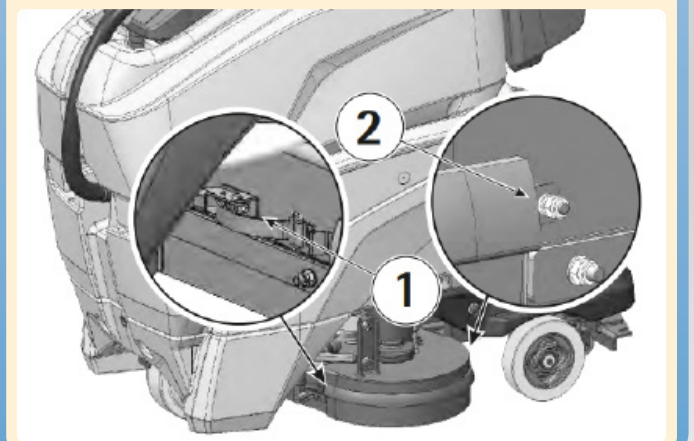

SAFETY RULES



- This machine must be used exclusively by authorized and trained personnel.
- When this machine is parked, remove the battery connector, remove the key and activate the parking brake (if present).
- When working with this machine, pay attention to other people and especially to children.
- In case of danger, immediately press on the emergency button.
- Do not use this machine in explosive atmospheres.
- Do not use this machine on surfaces covered with flammable liquids or dusts (for example hydrocarbons, ashes or soot).
- In case of fire, never use water. Use a powder based fire extinguisher instead.
- Adapt your working speed according to the adhesions conditions: in particular, slow down before approaching tight curves.
- Do not use this machine on higher gradients than the one stated on the number plate.
- When performing maintenance on this machine, always use suitable individual protection devices (gloves, glasses and shoes).
- Indicate the wet areas on the floor.


FOR THE BATTERIES



- During any intervention on the batteries, wear suitable acid-proof gloves and glasses.
- Do not smoke near the batteries and do not go near them with open flames.
- There must always be a fire extinguisher nearby.
- Be very careful in case of battery liquid spills (corrosive).
- Do not place metal tools on the batteries. This can cause a short circuit.



BEFORE USING THIS MACHINE, CAREFULLY READ THE USE/MAINTENANCE MANUAL.

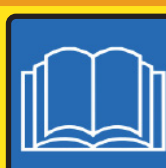

AUTHORIZED DEALER:

